



# Mitsubishi Diamondpoint NXM76LCD Display Replacement

Written By: Padraic Hoselton



 


## TOOLS:

- [Phillips #2 Screwdriver](#) (1)
  - [Phillips #1 Screwdriver](#) (1)
  - [5mm Nut Driver](#) (1)
-




## Step 1 — Removing the stand.

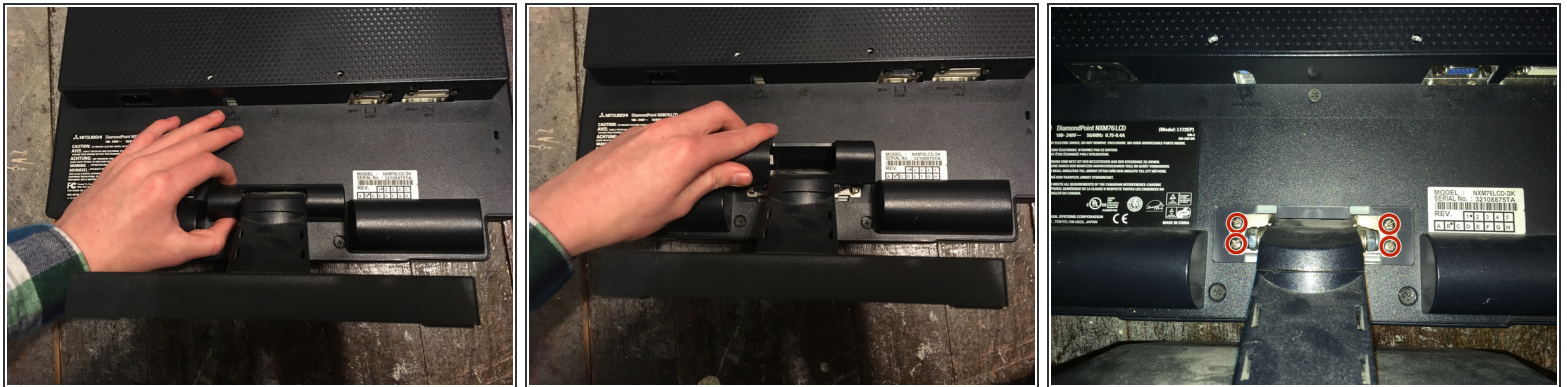

- Lift the black cover off.
- Remove all 4 Phillips #2 screws.

## Step 2 — Remove the 5 screws

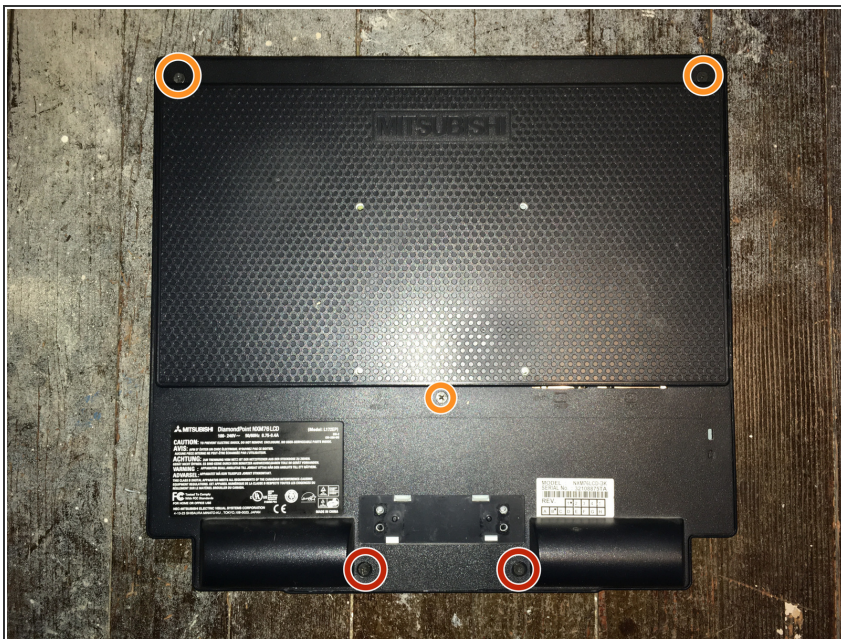 

- Remove the two 24mm Phillips #2 screws.
- Remove the three 8mm Phillips #2 screws.




### Step 3 — Remove the back panel



 - Lift the back and pry the back off.

**i** The panel is held in with clips on the side. It needs a lot of force to take it off.



### Step 4 — Remove the four screws

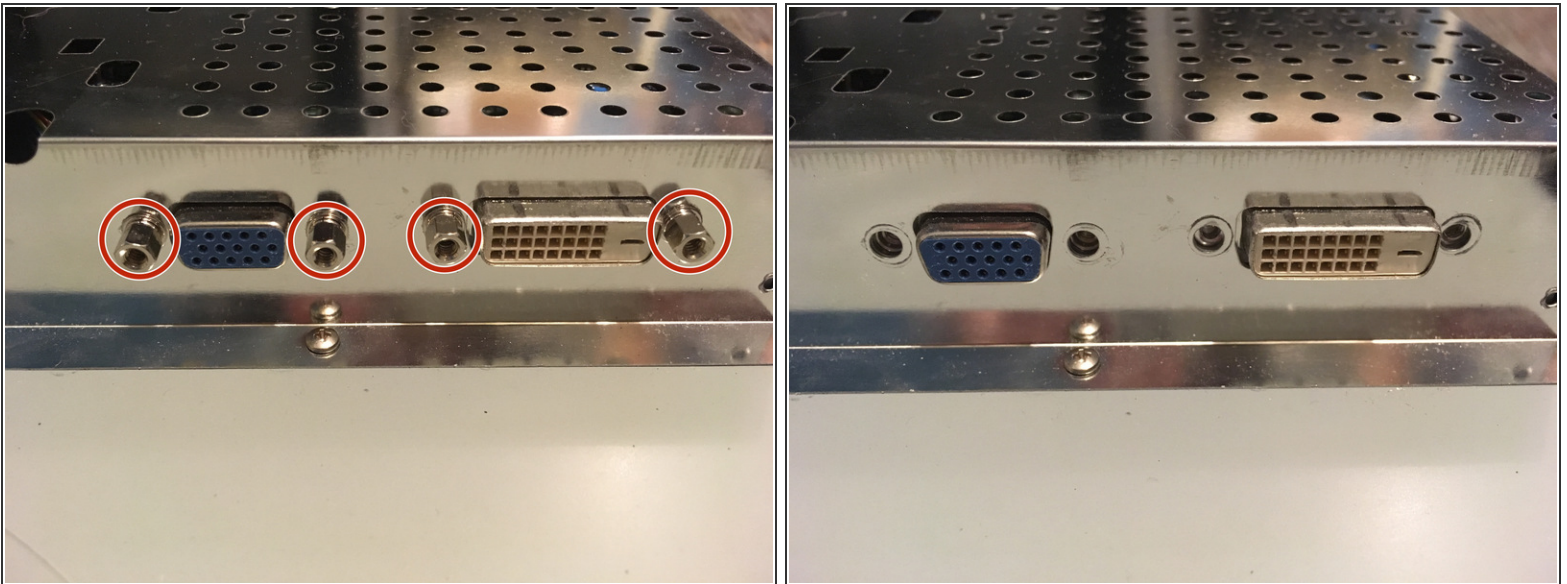

- Remove the four 5mm nut screws.




## Step 5 — Remove the 5 screws

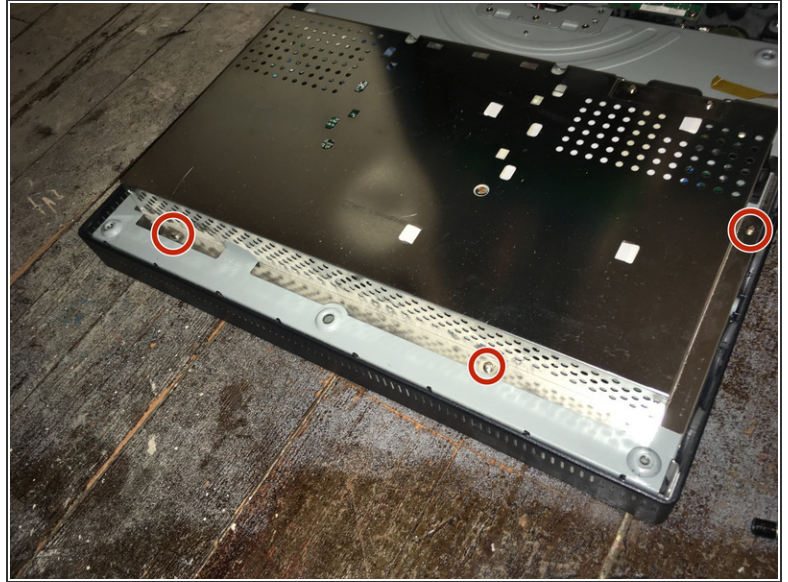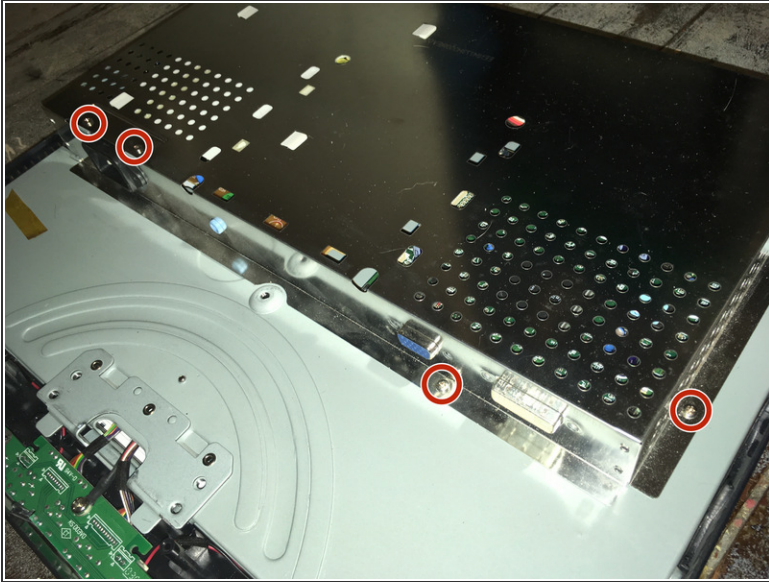  

- Remove the seven Phillips #1 screws.


## Step 6 — Remove the front panel

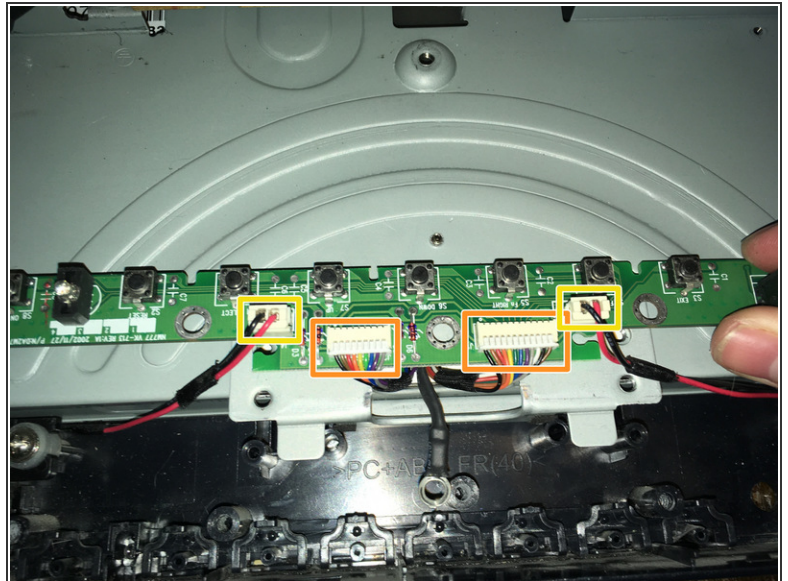 

- Remove the three Phillips #2 screws.
- Remove the two data/power cables.
- Remove the two speaker cables.




## Step 7 — Remove the display cable

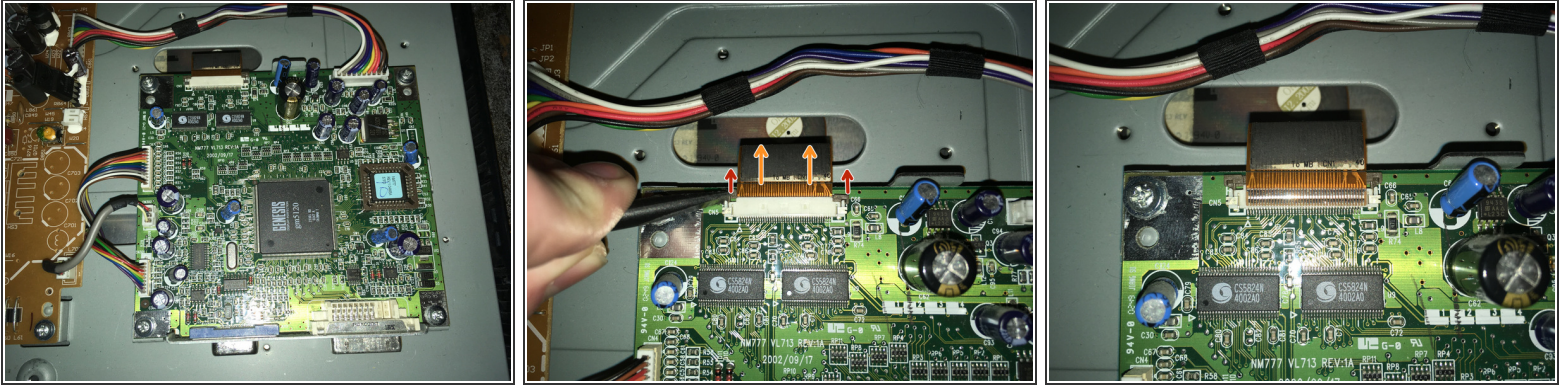 

- Pull the two tabs.
- Pull the connector off.


## Step 8 — Remove the power switch

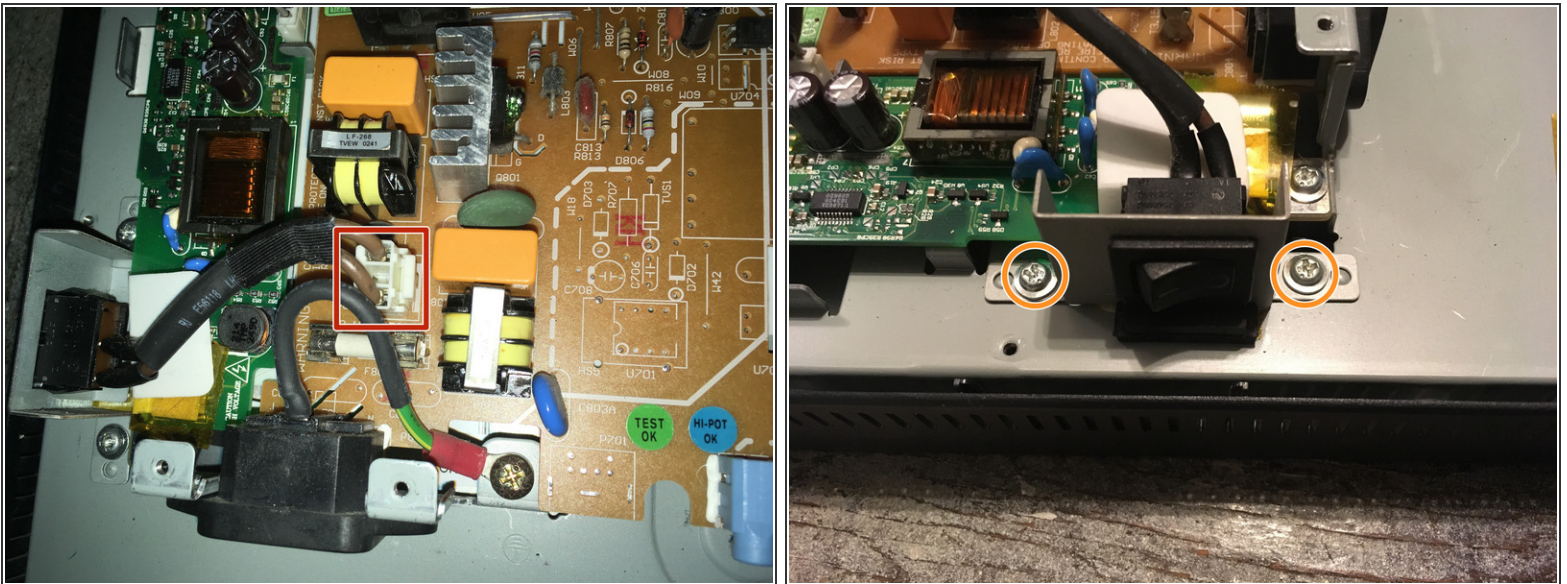 

- Remove the switch cable off.
- Remove the two Phillips #2 screws.




## Step 9 — Remove the display power

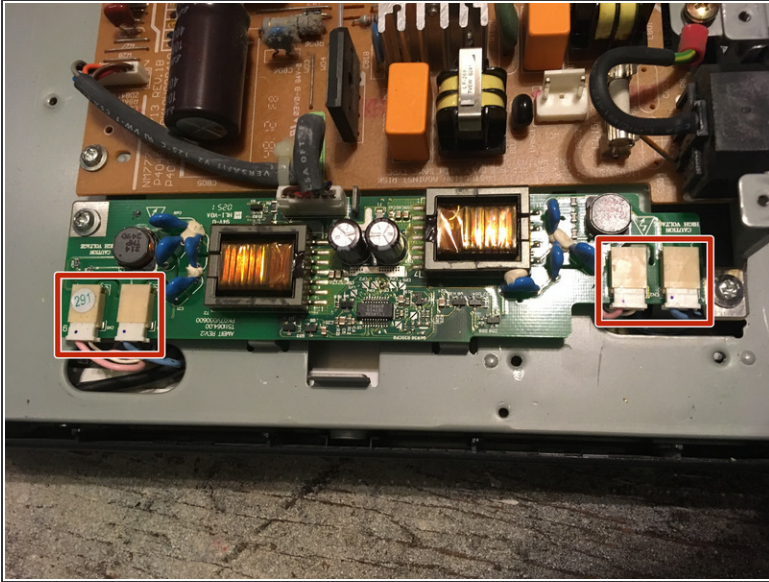 

- Remove the four display power cables.

**i** These cables are interchangeable.


## Step 10 — Lift the display out

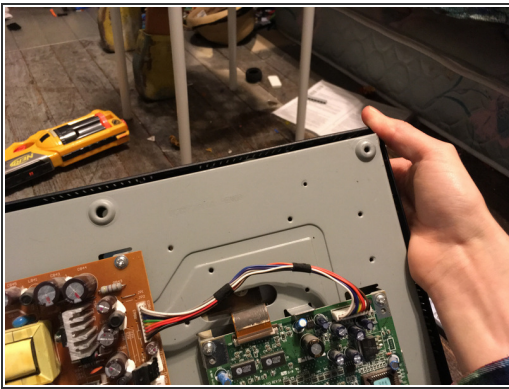 

- Lift the display out.





## Step 11 — Remove the four screws

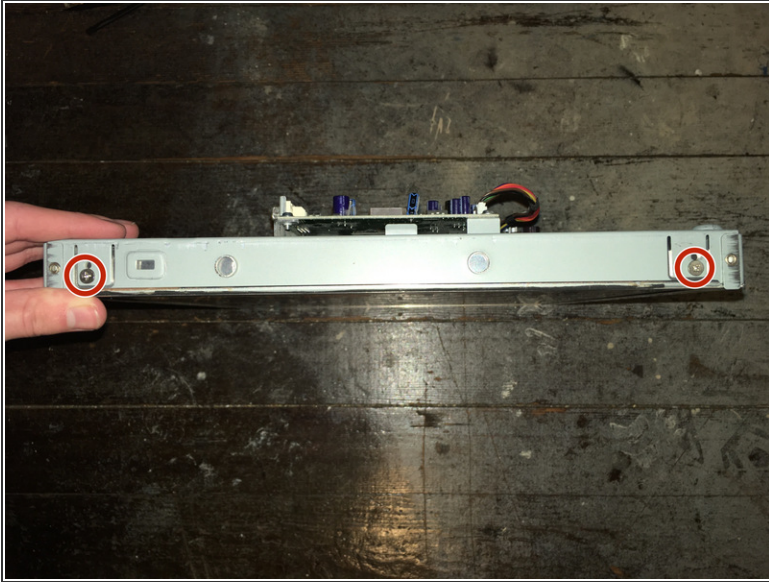 

- Remove the four Phillips #2 screws.

⚠ These screws release the display from its enclosure. Hold the screen when removing these screws.

## Step 12

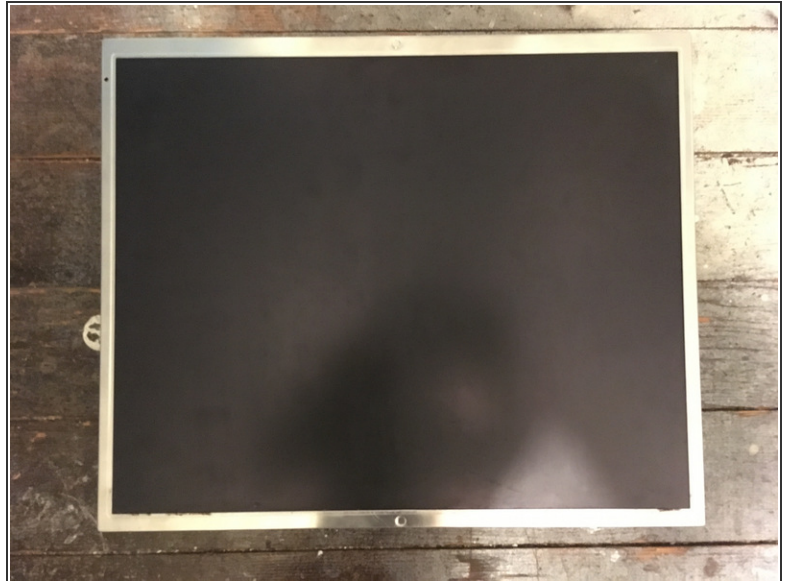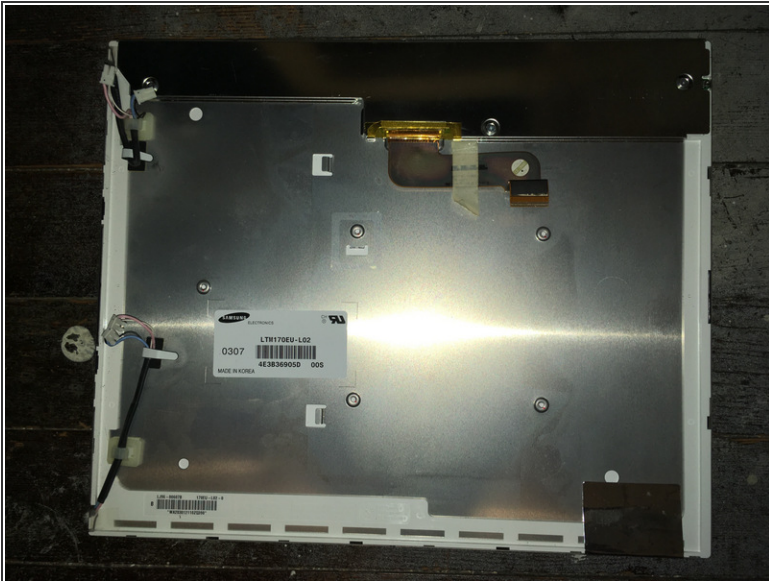  

★ **Remember** to plug in all the cables on the display.



To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-12-04 04:15:08 PM.